



Hood

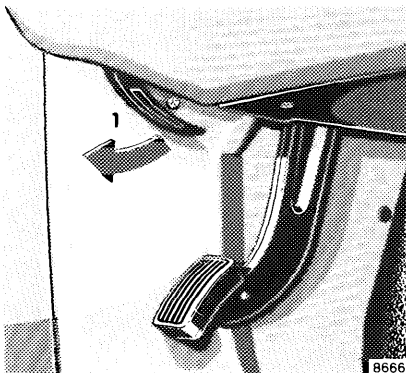

To open:

Pull hood release lever (1) under the LH side of the instrument panel to unlock the hood. The hood opens to the safety catch stop. At the same time handle (2) will pop out of the radiator grille.

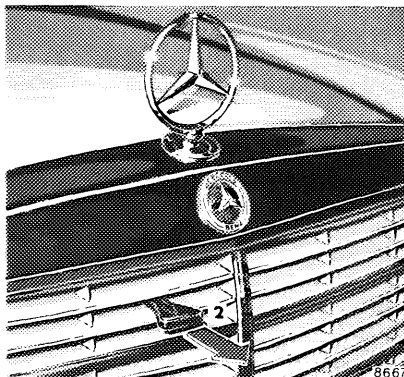

Pull handle (2) out of the radiator grille as far as the stop and lift up hood (windshield wiper arms must not be folded out).

Closing:

Close hood by depressing it firmly.

Warning!

Stay clear of moving parts when hood is open and the engine is running.